

digital controlled devices

dicodes

Dani Extreme V2+



manual

01 dicodes Dani Extreme V2+

The Dani Extreme V2+ is an electronically controlled MOD to be used with various atomizers of different sizes and diameter. It is offered in three different sizes and prepared to use one Li-Ion battery of size 18350, 18500 or 18650.

The Extreme V2+ has an adjustable high force spring loaded center pin made of copper beryllium (very hard) and an unique simple to use menu structure.

It is equipped with an OLED display, has a power output of up to 40W (up to 12V or 15A at the coil), and provides the option of temperature controlled vaping with many different kinds of wire-materials, for example dicodes-resistance-wire (RESISTHERM NiFe30), nickel, titanium, appropriate stainless steel, and others.

We recommend the dicodes-resistance-wire for optimal performance, ease of use and unique liquid flavor.

02 Features

- 5 to 40W with one Li-Ion battery
- Adjustable spring loaded high force 510-thread center pin made of CuBe
- Adjustable battery discharge level 2.5-3V
- Up to 12V output voltage
- Up to 15A output current
- Temperature controlled vaping mode with various wire-types
- Mechanical MOD mode (electronically overload protected)
- 10 Power boost modes
- 10 Heater protection modes
- Atomizer resistance range 0.05 to 5 Ohms, total range
- Atomizer resistance 0.2-3.5 Ohms (40W, guaranteed)
- Reverse battery protection
- Versatile easy to use menu structure
- Individual user preferences selection
- 2Year warranty

03 Display Operation


The MOD is equipped with a graphical OLED display which provides all important informations about the status during the vape and/or for 4 seconds after each vape (see display mode setting).

Temperature controlled mode (TC-mode):

Temperature during the vape
Other modes: battery symbol


Battery-voltage during the vape (including voltage drop during vape).

Actual Power applied to the coil (in TC-mode and Bypass-mode). Power setting in standard-mode.

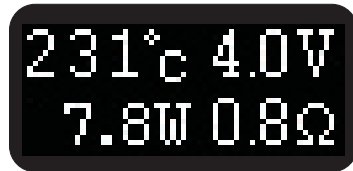

Coil-Resistance during the vape, (including temperature dependent change in TC-mode).

04 Menu Overview

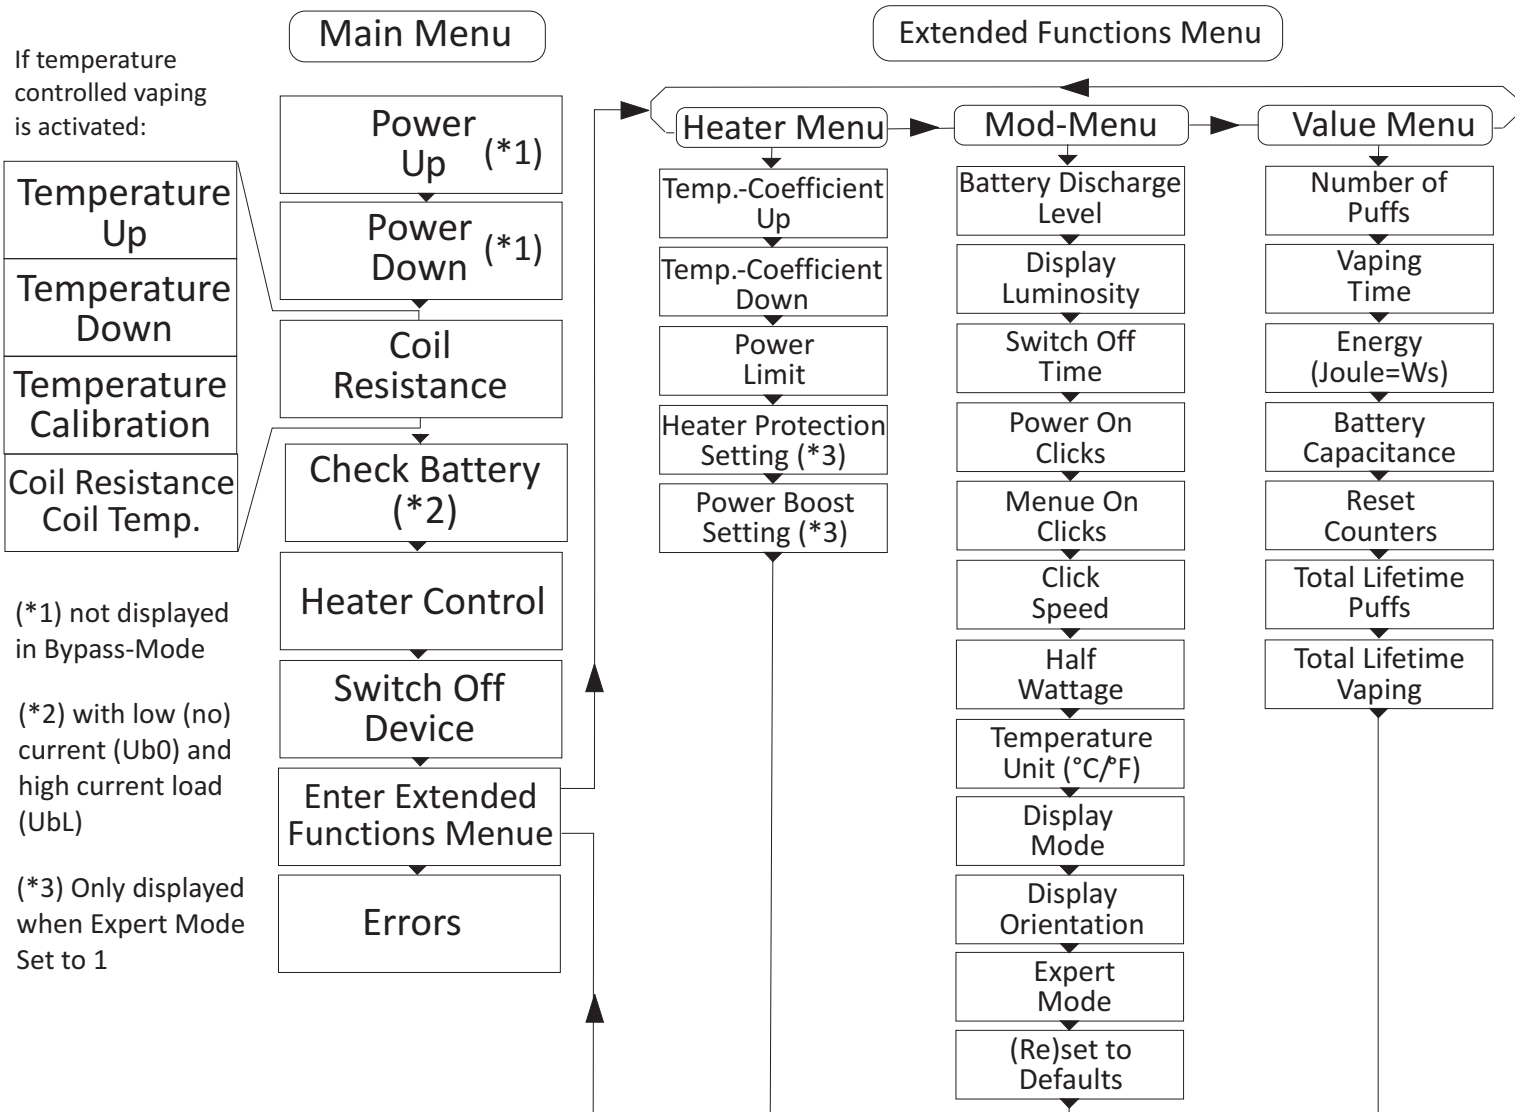

05 Main Menu (Page 1)

Power Up and Power Down

Power
↑ 22.0W

Power
↓ 22.0W

Power Up increases the power to the Power-Limit value and then rolls over to 5W. Power Down decreases the power down to 5W and then rolls over to the Power-Lim value. The Power-Limit value is adjusted in the Extended Functions Sub-Menu "Heater" and provides a protection feature for atomizers which are not prepared for high wattage or to reduce the power range intentionally. The wattage step size is 1 Watt below 20W and 2W above, but can be set to 0.5W and 1W respectively in the mod-menu with "Half Watt=1".

With temperature controlled vaping activated, the power setting is the power limit for the temperature regulator. If the power level is smaller than the value needed to achieve the selected temperature, the operation changes from a temperature regulator to a temperature limiter. If the power level is sufficiently high, it sets the heating up speed of the coil until the set-point temperature is reached.

In the operation mode "Bypass" (mechanical mod), the power setting is not available, because the power is defined by the battery voltage and coil resistance. The menu items "Power Up/Down" are not displayed in this case.

Temperature Up and Temperature Down

Temp
↑ 235°C

Temp
↓ 235°C

This Menu items are **only available and displayed if temperature controlled vaping is selected** (see Heater-Control menu item below). So the menu structure adapts to the selected operation mode. The Temperature Up/Down menu sets the setpoint for the coil temperature during vaping. The temperature setpoint can be selected from 120°C to 280°C (250°F- 540°F) in steps of 5°C (10°F). To achieve a high precision temperature control, a correctly performed reference measurement (TempCal Init) is mandatory, see next item.

Manual Coil Temperature Calibration

TempCal
Init 0

This Menu item is **only displayed if temperature controlled vaping is selected** (see Heater Control menu item below). For the use of temperature controlled vaping, the calibration measurement is a very important part of it. The Temperature calibration measures the coil resistance at room temperature (20°C) as the reference for temperature controlled vaping. This together with the wire's temperature coefficient enables the mod to calculate the coil's temperature.

The calibration must be confirmed in a second step to avoid accidental activation. After confirmation the display shows "process" until the calibration completed. It is extremely important to understand, that, if the calibration is performed at a temperature other than 20°C, the control will regulate a constant temperature, but with an offset deviation. So take the ambient temperature during the temperature adjustment in to account. Similiar, if a wrong temperatuer coefficient was adjusted, the actual temperature might deviate dramatically from the set-point (here it is a factor and not an offset).

Always perofm a caibration, when a new atomizer is attached, even if it is made from the same coil material

Coil Resistance and Coil Temperature

R 0.37 Ω
T 235°C

This is a display only menu item. The coil resistance is displayed in a range from 0.00 to 9.90 Ohms. If temperature controlled vaping is selected, the current measured coil temperature is also displayed, if not, the display shows T ---. If the display does not show 20°C even with colled down atomizer, it is recommeded to perform a manual calibration.

05 Main Menu (Page 2)

Battery Status

```
Ub0 4.0V
UbL 3.7V
```

The Check Battery item shows the battery voltage with little current drained (Ub0) and the battery voltage under load during the last puff (UbL). The difference is the voltage drop of the battery. A high drop (>0.4V) indicates a poor battery or contact problems.

Please note that every battery has an inner resistance and that therefore the voltage at its contacts always drops when current is drained. The more current is drained, the higher the drop will be. Always remember this behaviour.

Commonly used batteries of 18650 size have inner resistances of about 15mOhm up to 80mOhm. Smaller sized batteries even have higher resistances. Generally speaking, the batteries with high capacity have higher inner resistance (e.g. 2500mAh NCR has 75mOhm) and those with lower capacity also have lower inner resistance (e.g. 2100mAh Sony Konion has 15mOhm).

Heater Control (Operation modes)

The mod can be used in up to 5 operation modes. The mode can be selected in this menu. The default operation is either standard (0, power setting) or temperature controlled vaping (1). With the "Expert Mode" (Extended Functions Mod-Menu) enabled, additional operation modes are Heater Protection (2), Power Boost (3), and Bypass (4, mechanical mod). With Expert Mode disabled, the menu options 2..4 are masked out.

```
HCtrl 0
Standrd
```

0. Standard Mode

In the standard operation mode the wattage selected in the power setting menu is applied to the coil, unless the voltage would be greater than 12V or the current greater than 15A, which depends on the coil resistance.

For example with a coil resistance of 4 Ohms and a power setting of 40W, the required voltage at the coil is 12.7V. With 4 Ohms the maximum wattage is 36W ($(12V)^2/4R=36W$). Or, if the coil resistance is 0.1 Ohm the maximum power is 22.5W, because $(15A)^2*0.1Ohm=22.5W$.

As can be seen from the examples, with high coil resistance the power is limited by the maximum voltage of 12V and with low resistances by the maximum current of 15A. The fact is also reflected in the feature list: A power of 40W is guaranteed from 0.2 to 3.5 Ohms. Resistances of 0.05 to 5 Ohms are possible but with a reduced power.

```
HCtrl 1
TmpCtrl
```

```
Wire320
NiFe30
```

```
⋮
```

```
Wire280
Other
```

1. Temperature controlled vaping

In this mode the mod will regulate the temperature of the coil to the pre-set value, except the power setting is too low to achieve the temperature. So please note to adjust the power setting to a value high enough, if you choose temperature controlled vaping. Otherwise the temperature regulation changes to a temperature limitation mode.

When Hctrl is set to 1, the menu directly jumps to the selection of the wire type. Here the user can select between dicodes-wire (NiFe30), Nickel 200, Titan, Tungsten (Wolfram), Stainless Stell (Inox) and "Other". With "Other" selected, the temperature coefficient defined in the Extended Functions Menu under item "Tmp. Cof" is used. The value of the selected coefficient is displayed behind "Wire". For commonly used wires, the predefined coefficients are: NiFe30=320, Nickel200=620, Titanium=350, Tungsten=440 and Stainless Steel=105. Note that there are different alloys for Titanium and Stainless Steel on the market, so the predefined values can deviate from the actual wire-value you use.

05 Main Menu (Page 3)

HCtrl 2
HtrProt

Parameter ↑

Extended Functions
Heater Menü

Heater
Prot 2

2. Heater Protection Mode (only when Expert Mode=1)

The heater protection mode is a periodic interruption of the power applied to the coil. The duration and the repetition rate of the interrupts is selected by means of the parameter "Heater Prot" in the extended functions mod-menu. The repeated power interrupt helps to avoid a break in liquid flow and thus an increase in temperature.

The table below shows the relation between power interrupt and appliance time in dependence of the parameter "Heater Prot":

Value Heater Prot	On-Time [ms]	Off-Time [ms]	Powerfactor
1	400	100	0.80
2	600	100	0.86
3	800	110	0.88
4	1000	120	0.89
5	1350	150	0.90
6	2000	200	0.91
7	2000	180	0.92
8	2000	150	0.93
9	2000	100	0.95
10	2000	80	0.96

Main Menu

HCtrl 3
P-Boost

Parameter ↑

Extended Functions
Heater Menu

Power
Boost 1

3. Power Boost Mode (Only with Expert Mode =1)

The Power Boost Mode enables an initial short term high power pulse applied to the coil (boost). The boost power is the value of the parameter "Power Limit". Beside 3 selectable initial boost lengths, further options generate a periodic boost pulse with different length and repetition rate.

An initial boost is for quick coil heat-up. The periodic boost lets the coil temperature pass a certain range all the time. In this case different flavours within the liquid, which all develop their taste at different temperatures, are all addressed by the varying temperature.

We recommend to set the normal power (not the boost) to much lower values, when using the periodic boost, because the average power is increased by the boosts and temperature gets higher therefore.

Wert Power Boost	Boostzeit [ms]	Zeit auf Nennleistung [ms]	Effektive Leistung (bei 5W Nennleistung)
1	300	-	Start-Boost
2	450	-	Start-Boost
3	600	-	Start-Boost
4	50	500	6.18
5	80	600	6.53
6	120	700	6.9
7	160	800	7.17
8	200	900	7.36
9	250	1000	7.6
10	300	1000	8.0

Note: If the power setting equals the power limit value, the boost has no function, as it is limited to that value as well.

For a graphical diagram showing the boost operation options, please refer to the document "Explanations referring to the Power Boost on dicodes mods" or have a look to the manual of model Tiny.

05 Main Menu (Page 4)

Switch Off Device

Switch
Off 0

Beside the Auto-Power-Off feature, the user can actively switch off the device. It is recommended to switch the device off or to wait for auto-power-off, before the battery is replaced, because then the statistic counters (see below) are saved. Otherwise the changes since the last power up are lost.

To switch off the device wait on this menu item until the display of the 0 is inverted, then press the button.

Extended Functions Menu

Extend.
Funct.

The Extended Functions Menu provides three logically grouped sub-menus:

- Heater Menu ➔ Settings related to the heater or coil
- Mod Menu ➔ Settings related to the individual usage and appearance
- Value Menu ➔ Provides several statistics of vaping

The Extended Functions Menu offers a lot of setting options of the mod, to provide the highest possible flexibility for the user to individually adjust it to whatever preferences. Normally, once the settings were made, the user will need to change the parameter rarely. In order to keep the main menu as short as possible, the extended functions menu was created.

The many options may frighten some of the users initially. But without the extended functions menu the mod would not be able to address all different customer requirements. Please take a bit of time to get familiar with the menu. We are sure, as soon as you have gained an overview, the individual setup is a walk-over.

Error Messages

ErrNo 1
ChkAtom

If an error occurs, the mod directly jumps to the error menu and displays the error number and a mnemonic (short-term) description.

The possible error messages are:

- 0 OvrVolt: The input voltage is too high. The DaniExtreme V2 is prepared for the use of one battery. If the input voltage exceeds 4.5V this error message is displayed. Reduce the input voltage to the specified range.
- 1 ChkAtom: No atomizer detected or open coil.
- 2 TempRef: A problem during the temperature reference measurement occurred
- 3 HighR: The resistance of the coil is too high for the selected output power. The maximum output voltage is 12V and current is 15A. This specification together with a maximum output power of 40W leads to a resistance range of 0.2-3.5 Ohms. Also see "8 LowR". Higher and lower resistances are possible, but the power has to be reduced accordingly.
Example 1: With a 40Ohm coil the maximum power is $(12V)^2/4 \text{ Ohm}=36W$.
Example 2: With a 0.12Ohm coil the maximum power is $(15A)^2*0.12 \text{ Ohm} = 27W$. Note that for resistances >3.5 Ohm the output voltage is the limiting factor, whereas for resistances <0.2 Ohms it is the current.
- 4 OverCur: Short on coil or coil breakdown (open)
- 5 LowBat: The battery voltage under load (with current drained from it) has reached the minimum discharge level, defined with parameter UbatMin in the extended function mod-menu.
- 6 EleHot: The electronics have heated up too much and needs to cool down. This error will not occur with normal usage of the mod.
- 7 TimeOut: The maximum puff-time is limited depending on power. For a power <20W it is 20seconds. Above 20W it decreases by 0.5seconds per Watt.
- 8 LowR: The coil resistance is too low for the selected power, please see "3 HighR".

06 Extended Functions Menu (Page 1: Overview)

Extend. Funct.

Heater Menu

Temp. Cof↑320 Increase wire temperature coefficient (*1)

Temp. Cof↓320 Decrease wire temperature coefficient (*1)

Power Lim 40W Set Power Limit (40Wmax.)

Heater Prot 2 Select heater protection mode (1..10)

Power Boost 1 Select power boost mode (1..10)

Mod Menu

UbatMin 2.6V Set the minimum bat discharge level (2.5..3V)

Lumen 4 Set display luminosity (1 low to 5 high brightness)

SwOff Time 30 Select auto power off time (1-2-5-10-15-20-30-60 minutes)

On Click 0 Select number of clicks to switch on mod (0..5). 0=> immediate vape

MenuOn Click 1 Select number of clicks to get into the menu (1..5).

Click Speed 3 Speed for button usage (1 fast..5 slow). (*2)

Half Watt 1 Select wattage steps 1W/0.5W (<20W) and 2W/1W (20-40W)

Temp. Unit °C Selects temperature unit either °Celsius or °Fahrenheit.

Display Mode 1 Parameter display during vape on/off (*3)

Display Dir R Select display orientation between Left and Right (handed)

Expert Mode 1 Select Expert mode to enable power boost, heater protection and bypass mode.

SetDef init Switch back all settings to factory defaults (refer to manual).

Value Menu

Cycles 5432 Counts the number of puffs since last counter reset.

Time 1:23:34 Displays pure vaping time in H:MM:SS since last counter reset

Energy 7435J Energy taken from battery during vaping since last counter reset

BatCap 1796Ah Displays battery capacitance since last counter reset (can show battery quality)

Reset Cntr 0 Reset the counters above.

TotCycl 25626 Total lifetime puffs of mod. Not resettable.

TotTime 27:54 Total lifetime vaping time of mod in HHHH:MM. Not resettable.

(*1) The temperature coefficient selects the type of wire material, range 100 to 650: When TC-mode is selected (Main menu HCtrl=1), the user must select the wire type to be NiFe30 (dicodes wire), Ni200, Titanium, Tungsten (Wolfram), Stainless Steel (Inox) or "Other". The value for "Other" is adjusted here. The values of the predefined wire-types are 320=dicodes-wire, 620=Nickel, about 105=Stainless Steel, 350=Titanium (varying literature values, danger: fire hazard), 440=Tungsten (Wolfram). Value to select = Literature-value*10E5 K.
Example: Ni 6.2E-3*1/K * 10E5*K => 620

(*2) Setting 1 (fastest) as 2 but without animation (visual shift effect), setting 5 (slowest) as 4, but without fast auto-repeat.

(*3) When temperature controlled vaping mode is selected and with display mode=1, the current values of "Power", "Temperature" and "Wire-Resistance" can be observed during the vape. In standard mode, the battery symbol, power and resistance is displayed. In Bypass mode the calculated power is displayed. With display mode =0 these parameters are displayed after the vape with the latest values.

06 Extended Functions Menu

Additional Explanation to several menu items, page 1

In the following paragraphs, explanations are given for those parameters and items, which are not self explanatory or which have inter-dependencies with other parameters or functions.

Temp.
Cof† 320

The selection of the correct wire-temperature-coefficient is very important for the correct operation of the mod, when temperature controlled vaping is selected. The mod provides predefined coefficients in the main menu for wire types NiFe30 (dicodes wire), Ni200, Titanium, Tungsten (Wolfram) and Stainless Steel (Inox). If "Other" is selected as wire type, the value of this parameter is used as the temperature coefficient. The TempCof item in the menu is visible, even if the operation mode is not selected to temperature controlled vaping.

Power
Lim 40W

The Power Limit has an effect on several functions of the mod:

- Power Limit defines the adjustment range of the power in the main menu. As stated in the main menu already, the limit value sets the roll-over point of the menu items "Power Up" und "Power Down". The power limitation makes sense especially in the standard vaping mode and the use of small atomizers or coils, to avoid a coil break.
- Power Limit sets the power during the boost-phase in the Power Boost Mode.

UbatMin
2.6V

All dicodes devices have a functionality to adjust the minimum discharge level of the battery between 2.5V and 3.0V (older models 3.5V). Almost all available batteries on the market specify the minimum discharge level of 2.5V to 2.7V. If the user is unsure, whether her/his specific battery meets this specification, the level should be set to 2.7V.

The selected voltage is the voltage at the poles of the battery when current is drained from it (the current drained depends on the power at the coil). In contrast to other available tube- and box-mods on the market, which stop operation already at 3.4V, the lower discharge level on dicodes mods lead to a better battery utilization (about 20%).

SwOff
Time 30

On
Click 0

The time to automatic power off of the mod can be selected between 1 minute up to 60 minutes. We recommend to choose 2 or 5 minutes in conjunction with immediate vaping enabled ("OnClick"=0). This is the best utilization of the battery. In this combination, though, there is one situation to be considered: If the mod is transported in a bag, e.g., and the button is accidentally pressed all the time, it theoretically could happen that the mod exceeds the maximum vape time, error 7, goes into auto power off, is immediately switched on again and so forth in an endless loop.

To overcome this potential problem, the mod has an implemented secure behaviour: If "OnClicks" ≤ 2 **AND** Error 7 (TimeOut) happened **AND** the mod has an auto-power-off, the mod can only be switched on again by pressing the button short term 5 times. This behaviour happens only one time. Afterwards the operation is as selected by the user. The 5 OnClicks is also activated, when "OnClick" ≤ 2 **AND** the device is actively switched off by the user (not auto-power-off).

As indicated, the OnClick range is from 0 (immediate vape) to 5. Note that the mod is always on after the first click, and then detects whether the selected number of clicks is performed in a certain time. If this is not the case, it switches off immediately.

06 Extended Functions Menu

Additional Explanation to several menu items, page 2

Display Mode 1

The display mode switches on and off the dynamic display of several parameters during the vape.

With display mode =1 and temperature controlled mode, these parameters are the temperature, coil resistance, temperature regulating power and battery voltage.

For the modes standard, boost and heater protection the selected power (static, no change), the coil resistance and the battery voltage are displayed.

When Bypass mode is selected, the coil resistance and battery voltage dependent, calculated power is displayed, as there is no fixed power setting in bypass mode.

When display mode =0 is selected, the values of the mentioned parameters at the end of the vape are displayed for about 4 seconds. In this case the values will not vary of course.

Expert Mode 1

The Dani Extreme V2 can be used in 5 different modes. But in order to keep the menu as short and simple as possible, 3 of the 5 modes are only available, if the Expert-Mode is set to 1. The name is Expert-Mode, because the use of the additional operation modes requires additional knowledge about their functionality.

The additional modes available with Expert Mode set to 1 are "Power Boost", "Heater Protection" and "Bypass".

Here again the modes in an overview:

- Standard: Vaping with a constant power setting. The selected power is applied to the coil, unless the coil's resistance affords a different power setting.
- Temperature Control: The power applied to the coil is calculated by a temperature controller which keeps the coil's temperature constant. Important to note: Set the right temperature coefficient and perform a calibration at room temp.
- Power Boost: The coil is quickly heated up initially. Moreover an repetitive boost can be selected. Note to not to set the power limit to a value too low and use lower normal power setting.
- Heater Protection: The power to the coil is repetively interrupted to enable a liquid flow und to limit the temperature.
- Bypass: The mod behaves like a mechanical mod, i.e. the battery voltage is directly applied to the coil. This with the restriction, that the maximum current is limited 15A. Note that the vape now depends on the charging level of the battery, and the coil should not be very low in resistance as then 15A is reached soon.

06 Extended Functions Menu

Additional Explanation to several menu items, page 3

Value Menu

The Extended Functions Menu has another sub-menu showing several statistical values. There are two types of value-counters, either re-settable to zero or not.

The statistic counters are saved whenever the mod is automatically or manually switched off. In contrast, if the battery is removed from the mod before switching off, the changes of the counters since the last switching on are lost.

Cycles
5432

- Cycles Number of puffs. The counter can be reset to 0.
- Time The timespan during which power was applied to the coil, i.e. vaping time. The counter can be reset to 0.

Time
1:23:34

- Energy This is the energy consumption during vape in Joules=Watt-Seconds. This value is the true integrated vape power over time. It is the power integral, because during temperature controlled vaping (and also in bypass mode) the power is not constant, but varies a lot over time due to the regulation. The counter can be reset to 0.

Energy
7435J

BatCap
1796Ah

- BatCap This is a quite interesting counter: If it is reset immediately after the insertion of a fully charged battery, and checked before a new battery is inserted, it shows the batteries capacity. With this function the user can check, whether the battery has a capacity as declared by the manufacturer or whether the battery is wear-out. This counter can be reset to 0.

Reset
Cntr 0

- TotCycl "Total Cycles" is the number of puffs throughout the entire mod's life. It cannot be reset.

TotCycl
25626

- TotTime "Total Time" is the total time of vaping (not stand by) in a format HHHH:MM that is 4digits of hours and 2 for minutes. It cannot be reset.

TotTime
27:54

The menu item **Reset Cntr**, i.e the resetting of the counters, is intentionally positioned between resettable counters and those which cannot be reset. So it is easier to remember, which are reset.

There is often the request for a recommendation regarding types of batteries.

Without claiming completeness nor undue preference of a manufacturer we can recommend:

Samsung INR18650 25R

LG ICR18650 Hd2

Sony Konion US18650UTC4

07 Remarks and Notes

Battery

Always use batteries with high drain or very high current capability (even with lower capacitance, except power is below 20W). Avoid to use no-name products. Insert the battery with the plus terminal in the direction towards the atomizer and in angular position.

Electronic cigarettes

Electronic cigarettes are NOT healthy. But so far all studies indicate, that they are less harmful compared to tobacco- cigarettes.

Electronic cigarettes are an alternative to tobacco-products, but should not be regarded as an dehabituating to smoking.

Electronic cigarettes are not suited for children and youngster below 18years of age, non-smokers, pregnant women, persons with allergies against Nicotine, Propylene Glycol and persons with cardiovascular disease.

Selling to persons below 18years of age prohibited!

Battery Disposal

You bought a rechargeable battery powered product. The rechargeable battery lasts long, but wears out nevertheless. Li-Ion batteries may not be disposed in household waste. Customers are obligated by law to dispose wear out batteries to appropriate gathering points.

Mod Disposal

The symbol below indicates that this product should not be treated as household waste, but according to WEEE (waste electrical/electronic equipment) should be reused or recycled. Thank You!

dicodes GmbH

Friedrich der Große 70

D-44628 Herne

Germany

Phone: +49 2323 1463635

Email: info@dicodes-mods.de

Web: www.dicodes-mods.de

